


MÄRKLIN HO

GEBR. MÄRKLIN & CIE. ^{GM}_{BN} · GÖPPINGEN / WÜRTT. GERMANY

7001

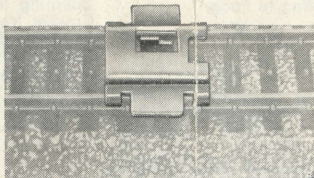

68 700
AN 0262 ma


*Bitte lesen
und aufbewahren*

Kupplungslehre
Calibre para enganches

Coupling Gauge
Calibro per ganci d'attacco


Jauge pour crochets d'attelage
Kopplingsmall
Koblingslære
Koppelingsmal

7001

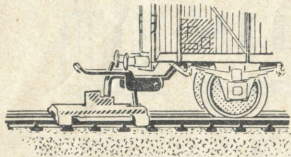


▲
Richtige Stellung der Kupplung
Correct position of the coupling
Crochet en position correcte
Posición exacta del enganche
Posizione esatta del gancio
d'attacco

Riktigt läge av kopplingen
Koblingsen rigtige stilling
Juiste stand van de koppeling

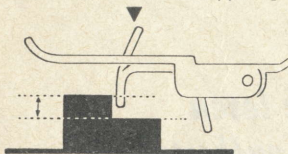


Printed in Western Germany

Kupplung zu hoch
Coupling too high
Crochet trop haut
Enganche demasiado alto
Posizione troppo elevata
Kopplingen för hög
Kobligen for høj
Koppeling te hoog

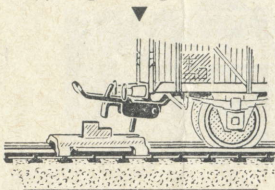

Kupplung zu tief
Coupling too low
Crochet trop bas
Enganche demasiado bajo
Posizione troppo bassa
Kopplingen för låg
Kobligen for lav
Koppeling te laag

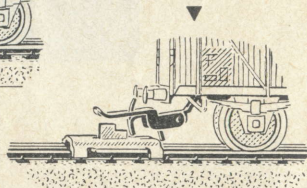

Imprimé en Allemagne

Impreso en Alemania